

ALWAYS follow the wording on the wires themselves.

Hook up the alternator by the picture to the right. You will hookup the large RED wire and the smaller gauge red wire running from the white plug to the 'bat' terminal of the alternator. Cut the small gauge RED wire to length, insert into boot with large gauge wire and crimp the small ring terminal to the wire. Run the other end of the large gauge RED wire to the starter solenoid or wherever your positive battery cable attaches to. Install the sleeve & ring terminal. The white plug with the BROWN & RED wires is plugged into the alternator. The BROWN wire marked ALT FEED->ACC is run to an accessory hot source in your wiring system (hot with the key on).

Need Help? Call our techline at 610-485-1981

Ron Francis Wiring 200 Keystone Rd. Chester, PA 19013 610-485-1981 www.ronfrancis.com