 


ALWAYS follow the wording on the wires themselves.



You will hookup the large wire to the 'bat' terminal of the alternator and run the other end to the starter solenoid or wherever your positive battery cable attaches to.. Install the sleeve & ring and connect it to the battery cable post of the starter solenoid or wherever your positive battery cable attaches to.

IMPORTANT: Installing the sleeve and ring terminal is an important connection.

Plug the black connector into the alternator. The **BROWN** wire marked ALT FEED->ACC is run to an accessory hot source in your wiring system (hot with the key on).

The red capped connector is a component necessary to provide proper signaling to the alternator. Please do not disturb this component.

## Need Help? Call our techline at 610-485-1981

Ron Francis Wiring 200 Keystone Rd. Chester, PA 19013 610-485-1981 www.ronfrancis.com