


AH-24
Alternator Wiring Kit
for Ford 4G
Alternators

ALWAYS follow the wording on the wires themselves.

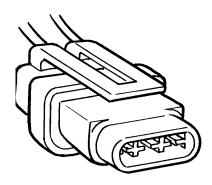

You will hookup the large RED wire to the 'bat' terminal of the alternator

and run the other end to the starter solenoid or wherever your positive battery cable attaches to. Install the sleeve & ring and connect it to the battery cable post of the starter solenoid or wherever your positive battery cable attaches to.

IMPORTANT: Installing the sleeve and ring terminal is an important connection.

Plug the black connector into the alternator. The **BROWN** wire marked ALT FEED->ACC is run to an accessory hot source in your wiring system (hot with the key on).

## Need Help? Call our techline at 610-485-1981

Ron Francis Wiring 200 Keystone Rd. Chester, PA 19013 610-485-1981 www.ronfrancis.com