

The cooling fan relay will handle one large or two small radiator cooling fans (up to 30 amps). A 30 amp fuse is in line on the blue wire running to the fan to protect the circuit.

Mount the relay under the dash and wire as follows:

Red: run this to the starter solenoid and connect it to the same terminal as the positive battery cable using the yellow ring terminal provided.

Blue: connect this to the cooling fan.

Orange: to ignition hot with the key on.

Black: to a good ground.

Ground: the other wire running from the cooling fan.