



This accessory is only used on carbureted engines. Using this on a electronic fuel injection engine will by-pass the ability of the computer to control the fuel pump. The electric fuel pump feed wire supplies 12 volt ignition to the fuel pump.

Express & Bare Bonz II Panel Installation

Connect the electric fuel pump feed wire to #M on the panel. The pump must be grounded. Check the manufacturers requirements on the fuse rating of the fuel pump you are using.

Advantage Panel Installation

Connect the electric fuel pump feed wire to #24 on the Advantage Panel. The pump must be grounded. Check the manufacturers requirements on the fuse rating of the fuel pump you are using.

Without our wiring kit

If you are not using one of our Panels this wire should be connected to a source that only supplies voltage (12 volts) with the key in the run position. Check the manufacturers requirements on the fuse rating of the fuel pump you are using.