

Mount the switch on the trunk lid or engine hood so when it is closed the switch is level. **IMPORTANT: The switch** must be mounted so when the lid is raised the switch tips towards the switch mounting screw. This is the same end that the wires exit the switch. Mounting it any other way prevents the switch from operating properly. Now mount the bracket holding the light in the desired location. Run the red FEED wire to the interior light fuse on your fuse panel or to a battery fused circuit (hot all the time.) Connect the black GROUND wire to a good grounding location. The bulb replacement part number is #89.

