



The relay will handle up to 30 amps. A 30 amp fuse is in line on the blue wire running to the pump to protect the circuit. Review the installation instructions provided with the pump for the correct fuse size required for the pump and lower if necessary.

Mount the relay under the dash and wire as follows:

Red (BATTERY FD ) (10 gauge wire): run this to the starter solenoid and connect it to the same terminal as the positive battery cable using the yellow ring terminal provided.

Blue (FUEL PUMP) (10 gauge wire): connect this to the positive wire running from the pump.

Ground the other wire running from the pump.

Orange (IGNITION FD) (18 gauge wire): to ignition hot with the key on.

Black (GROUND) wire: to a good ground.

Customer Service number: 800-292-1940