



The relay will handle up to 30 amps. A 30 amp fuse is in line on the blue wire running to the Nitrous activation device for circuit protection. Review the installation instructions provided with the Nitrous system for the correct fuse size required and lower if necessary.

Mount the relay under the dash and wire as follows:

Red (BATTERY FD ) (12 gauge wire): run this to the starter solenoid and connect it to the same terminal as the positive battery cable using the yellow ring terminal provided.

Blue (NITROUS) (12 gauge wire): connect this to the positive wire running to the Nitrous system.

Orange (IGNITION FD) (18 gauge wire): to ignition hot with the key on.

Black (GROUND) wire: to a good ground.

The system will also require a good ground.

Customer Service number: 800-292-1940