



The relay will handle up to 30 amps. A 30 amp fuse is in line on the blue wire to protect this circuit. This wire will connect to the "low" beam head light wire running from the dimmer switch to the head lights.

Mount the relay under the dash and wire as follows:

Red (BATTERY) (12 gauge wire): run this to the starter solenoid and connect it to the same terminal as the positive battery cable using the yellow ring terminal provided.

BLUE (LIGHTS) (12 gauge wire): "Splice" this wire to the wire running from the dimmer switch that powers the low beam head lights.

Orange (IGNITION) (18 gauge wire): to ignition hot with the key on.

Black (GROUND) wire: to a good ground.

Customer Service number: 800-292-1940