

RON FRANCIS
Wiring

IS-19

Dash Mounted
Pull-To-Start
Switch

Switch with factory bezel & knob

This "Push-Pull" ignition switch has three positions:

1. In - (off)
2. Out, first click - (on)
3. Pull and hold - (for cranking the engine)

WIRING: Engraved in the plastic area on the switch is abbreviated letters defining each terminal. Follow the chart to the right for the proper connections to the switch.

© Copyright 2008 Ron Francis

NOTE: *This switch does not have an accessory position. When the switch is turned on power is supplied to both the ignition and accessory wires. Leaving the switch on for an extended period of time "without" the engine running is not recommended for any vehicles electrical system.*

Switch Wording	Connection Definition	Ron Francis Colors
"B"	Battery Feed (Requires a hot all the time)	Red
"I"	Ignition Feed (hot with the key in the run and crank position)	Orange
"A"	Accessory Feed (hot with the key in the accessory and run position) Terminal is inactive in the crank position	Brown
"S"	Starter (hot in the crank position only)	Blue