

RON FRANCIS
Wiring

PS-26

**Power Seat
Feed Wire**

The wire supplied is for the 12 volt feed to your power seat motor. A 30 amp inline fuse has been provided, but follow the manufacturer's instructions to be sure of the correct fuse size and a complete wiring diagram.

Installation

Connect the (PS SW FEED) wire to the feed wire running from the power seat switch. Run the wire (FUSE -> STARTER) to the starter solenoid. Cut the wire to length and install the ring terminal provided in the bag. Connect it to the same post on the solenoid as the positive battery cable is connected to.

NOTE: Ron Francis Wiring is continually changing and improving products. These instructions are written in conjunction with wiring kits in production now. If you have an older Panel, you may find that references to certain numbers and colors between the kits may not agree. You will need to call us with the serial number on your wiring kit and inform us of your needs. We will give you conversion numbers to make things happen.