


SW-37

IS-08 + DS-02


SYNERGY SERIES

DASH MOUNTED IGNITION SWITCH
with Polished Bezels and 4 Accent Rings
&
FLOOR MOUNTED DIMMER SWITCH

This ignition switch has been supplied with a standard key and a mounting bezel with color accent rings to dress up your dash area. We also offer our other types of dash mounted switches (push-pull, toggle, etc.) with similar looking mounting bezels with red, blue, tan and black accents to complement just about any color dash. Please go to our website at "<http://www.ronfrancis.com/>" for more information on these as well as all of our other products.

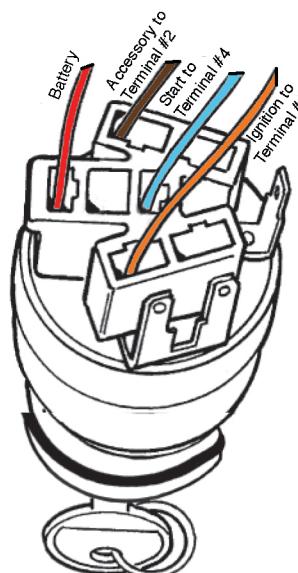

**NOTE: This switch uses
a 1" Mounting Hole**

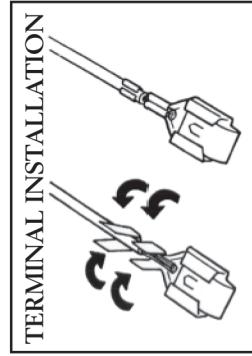

CAUTION! The wiring harness connector supplied will leave exposed two ignition and two accessory terminals on the switch. When mounting the switch, make sure these terminals WILL NOT come in contact with any surrounding metal (ground). -

In most installations this is not a problem, however if your application requires these terminals to be protected, call 1-800-292-1940 with your kit serial number. We will send out two, two gang connectors to insulate these terminals. Request part number CR-65.

WARNING: Engraved in the black plastic area on the base of the switch is abbreviated wording defining each spade terminal. Follow the chart below for the proper connections to the switch.

MOUNTING: It is important that the mounting nut be tighten as much as possible but it must be done without damaging the mounting nut itself. If you must use a hand tool to accomplish this, install one of the colored "O" rings that will not be used after final assembly or wrap the nut with three layers of masking tape. Continue tightening the nut. Remove the tape or and install the final colored O-ring. We recommend keeping the un-used O-rings in case the switch needs re-tightening at a later date.

SWITCH WORDING	USED FOR	CONNECTION DEFINITION	Access 24/7, Express, Bare Bonz I & II, AP-97, CP-94, DM-16 Wire Colors	CP-92 & Older Colors
BAT	Battery Feed	Requires a battery hot all the time wire.	Red	Yellow
IGN	Ignition Feed	This wire is hot with the key in the run & crank position.	Orange	Orange
ACC	Accessory Feed	This wire is hot with the key in the accessory and run position. Terminal is inactive in the crank position.	Brown	Red
ST	Starter	This wire hot with the key in the crank position only.	Light Blue	Light Blue
Un-Marked	Bulb Test	Normally not used in an aftermarket application. Terminal is grounded with the key in the crank position. Switch must be properly grounded for this terminal to function.	N/A	N/A