
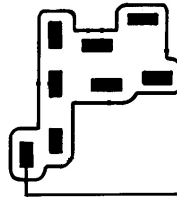



**RON FRANCIS**  
*Wiring*

**EX-10**  
**Courtesy Light**  
**Circuit (4 Door)**

**Installation**

Plug in the short (3") gray CRTSY LT harness into the gray pigtail running from the head light switch connector. Two self tapping (RFW # DJ-24) door jam switches have been supplied. (**NOTE:** These must be mounted in a metal door jam and are self grounding switches.) Drill a 11/32 mounting hole. Carefully thread the switches into the jam. These are self adjusting switches that adjust to the door jam width the first time the vehicle door is closed. Read the printing on the remaining two gray wires and plug them into the correct door jam switch. Cut the wires to length and install "both" gray wires into one terminal as shown below. Plug the terminal into the housing supplied and then into one of the short pigtails running from the head light switch.



**GRAY - FOR DOME LT**  
**GROUND SIDE**