

**RON FRANCIS**  
*Wiring*


**AH-14**  
**Alternator Wiring Kit**  
**for One Wire Alternators**

**ALWAYS follow the wording on the wires themselves.**

### One Wire Alternator

You will hookup the large **RED** wire to the 'bat' terminal of the alternator and run the other end to the starter solenoid. Install the sleeve & ring and connect it to the battery cable post of the starter solenoid.

**IMPORTANT:** Installing the sleeve and ring terminal is an important connection.

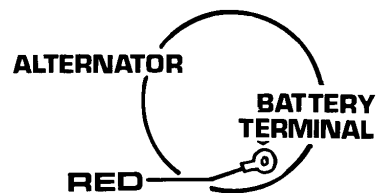

**Need Help? Call our techline at 610-485-1981**

**Ron Francis Wiring**  
**200 Keystone Rd.**  
**Chester, PA 19013**  
**610-485-1981**  
**www.ronfrancis.com**