



Fox Mustang Front Lighting Harness
Installation Instructions
UPGRADED WITH 3G/4G ALTERNATOR CONNECTIONS



*product may appear different from product received

These Instructions Cover the Following Part Numbers:

FH-076 1987-1990 Ford Mustang Front Lighting Harness with 3G/4G Alternator
FH-084 1991-1993 Ford Mustang Front Lighting Harness with 3G/4G Alternator

Installation Instructions:

- 1) Disconnect battery
- 2) Remove factory harness, taking note how wires are run. Disconnect main black 8 way connector at driver's side, near the brake master cylinder.
- 4) Install replacement harness following factory routing, starting at the main black 8 way connector at driver's side, near brake master cylinder. At the ground ring terminals that mount on the radiator support, make sure ground has clean metal and will make good contact to chassis metal.
- 5) This harness includes the connections for a Ford 3G and 4G alternators. If you are using a 3G, attach the large red wire with ring to the stud on back of alternator and plug the 3 position and 1 position connectors into the alternator. If you are using a 4G, follow directions for the 3G but the single white wire (may be white with a black stripe) with grey connector will not be used. Either tuck out of the way or cut wire and tape off with electrical tape and fold into the zip loom out of sight.

- 6) If your car was equipped with fog/driving lights, or you have added fog/driving lights, the 2 way connectors with orange and black wires are for this function. We have supplied the other half of the connector as well as terminals and seals to mate to these connectors. If you have factory fog/driving lights, you will need to remove the factory connector and use the seals/terminals/connector supplied. Follow these directions for terminal crimping:

- A) Strip wire roughly 1/4 inch.
B) Install green seal making sure not to fray any wire stands:




- C) Crimp terminal onto wire, crimping the wire strand area first. Crimp the wire seal second. If you do not have the proper crimp tool, use pliers to fold the flaps onto the wire. The cable seal flaps only need enough crimp to provide friction to keep the seal in place



- D) Install completed wires/terminals into connector sockets.

Once all wires/terminals are installed close secondary lock.

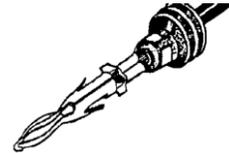

- 7) Complete installation by confirming harness is routed away from exhaust and any moving parts.

Wire Works Enterprises Inc
T/A Ron Francis Wiring
200 Keystone Rd.
Chester, PA 19013
800-292-1940
www.ronfrancis.com

Warranty Information

All Ron Francis Wiring products are warranted for 1 year from purchase date. There are no other representations, warranties or conditions expressed or implied, statutory or otherwise except those herein contained. Warranty does not cover any defect which is the result of improper installation or modification of the system or any of its components by purchaser.

Ron Francis Wiring, its dealers or agents will not be liable, in any way, for any damage, loss, injury or other claims, resulting from the use or misuse, or inability to use any of our products. Purchaser and/or user, assumes liability of any kind connected with the use and/or application of our products. Copyright © 2006 Ron Francis Wiring